

+
+
+
+

A	PORTAMENTO 0 1 2 3 4 5 6 7 8 9 10 X8 X4 S&H QNT	01 b #	02 b #	03 b #	04 b #	05 b #	06 b #	07 b #	08 b #	D ON D 1.2.1 /16 1.2.3.2.1 ∞ /8 1.3.5 X4 X4 /4 1.2.3 X3 X3 /3 1.2 X2 X2 /2 RST	GATE OUT STEP GATE ROW GATE FIRST GATE GATE 2 A+B+C END GATE GATE 1 A+B+C	CV OUT 0/+8V CV OUT A+B+C	CONTROL IN 0/+5V STEP REPEAT ADV DIV ROW REPEAT TRNP A+B+C
B	PORTAMENTO 0 1 2 3 4 5 6 7 8 9 10 X8 X4 S&H QNT	09 b #	10 b #	11 b #	12 b #	13 b #	14 b #	15 b #	16 b #	D ON D 1.2.1 /16 1.2.3.2.1 ∞ /8 1.3.5 X4 X4 /4 1.2.3 X3 X3 /3 1.2 X2 X2 /2 ON RST	GATE OUT STEP GATE ROW GATE FIRST GATE GATE 2 A+B END GATE GATE 1 A+B	CV OUT 0/+8V CV OUT A+B	CONTROL IN 0/+5V STEP REPEAT ADV DIV ROW REPEAT TRNP A+B
C	PORTAMENTO 0 1 2 3 4 5 6 7 8 9 10 X8 X4 S&H QNT	17 b #	18 b #	19 b #	20 b #	21 b #	22 b #	23 b #	24 b #	D ON D 1.2.1 /16 1.2.3.2.1 ∞ /8 1.3.5 X4 X4 /4 1.2.3 X3 X3 /3 1.2 X2 X2 /2 ON RST	GATE OUT STEP GATE ROW GATE FIRST GATE GATE 2 C END GATE GATE 1 C	CV OUT 0/+8V CV OUT C	CONTROL IN 0/+5V STEP REPEAT ADV DIV ROW REPEAT TRNP C

+
+
+
+

GLOBAL SETTINGS + + ▼ ▲ PROGR STORE	ASSIGN ● ROW A ● ROW B ● ROW C	CLOCK EXT INT MIDI ● INT ● MIDI ● CLK SEL ● CLK MOD ● EXT ● CLK MOD FREQUENCY	ADVANCE MODE ● FW ● BW ● FW/BW ● PNDL ● ALT ● RND	MAIN ● A+B,C ● A,B,C ● A+B+C ● SEQ MODE ● GATE ON ● ON ● GLOBAL LOOP ● PLAY ● STEP ADV ● RUN/STOP ● RESET	PULSE WIDTH ● PW MOD GATE	REMOTE ● MOM SWITCH - 0/+5V ● RUN/STOP ● LOOP ON/OFF ● RESET ● GLIDE ON/OFF	CLOCK ● 0/+5V ● CLOCK IN ● CLOCK OUT	CONTROL IN ● 0/+5V ● ADV MODE ● SEQ CLK MOD ● SEQ MODE ● SEQ PW MOD
---	--	---	---	--	--	---	--	---

+
+
+
+